

# Demo Mode Set-up



**BOSCH**

Invented for life





**Demo settings – your on-site sales support.** The right appliance presentation is the main element in the customer’s decision making. Live product demonstrations are a highly effective way to explain product benefits. To support live product presentations, many Bosch appliances feature a demo mode that allows customers to familiarize themselves with the functionality of our products without the aid of a salesperson.

On the following pages you will find the demo mode instructions for:

Dishwashers	4
Ovens	15
Electric Cooktops	16
Refrigeration	18

# Dishwasher Demo Mode Instructions

## 800 Plus Series Models–MV and TV Controls

### Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
  2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach).
  3. Close door.
- Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.*

### To Enter Demo Mode:



*Note: TV Controls use a unique Piezo technology that allows the controls to be highly sensitive and react immediately to even slight pressure. When instructed, buttons must be pressed or released in unison to ensure demo mode is activated. If directions say to hold down button(s) and then push others, the original button(s) must be held firmly without break.*

1. Begin with the dishwasher OFF.
2. Open the door. Press and hold any two program buttons (buttons 1-6).
3. Press the **A On/Off button** to turn the dishwasher ON and release the two program buttons.
4. Press the **B 1 button** as many times as necessary to display the code: **P 7**.
5. Press the **C 6 button** to confirm this choice and initiate demo mode.
6. Close the door. Dishwasher will now be in demo mode.

### During Demo Mode:

1. The display will always show: **1:23** and the **Regular Wash** LED will be illuminated. If any program button is pressed, its corresponding LED will illuminate.
  2. To demonstrate what the display will look like at the end of a cycle, hold down the **D Start/Reset button**. The display will then show: **0:01** and the **Regular Wash** LED will go OFF.
  3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.
- Note: Rinse Aid and salt LEDs will remain ON if you do not add Rinse Aid or salt. This will not affect demo mode.*

### To Exit Demo Mode:

1. Hold down the **D Start/Reset button** for 3 seconds. The display will show: **0:01**.
2. Press any two program buttons (buttons 1-6). The display will flash **0:01**.
3. Press the **A On/Off button** to turn the power OFF within 10 seconds.
4. Press the **A On/Off button** to turn the power back ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Model	Control Type
SHX68E05UC	MV
SHX68E15UC	TV
SHE68E15UC	TV
SHV68E13UC	TV

## 800 Plus Series Models–MG Controls

### Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
  2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach).
  3. Close door.
- Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.*

### To Enter Demo Mode:



1. Begin with the dishwasher OFF.
2. Press and hold any two program buttons (buttons 1-6).
3. Press the **A On/Off button** to turn the dishwasher on and release the two program buttons.
4. Press the **B 1 button** as many times as necessary to display the code: **P 7**.
5. Press the **C 6 button** to confirm this choice and initiate demo mode.

### During Demo Mode:

1. The display will always show: **1:23**. If any program button is pressed, its corresponding LED will illuminate.
  2. To demonstrate what the display will look like at the end of a cycle, hold down the **D Start/Reset button**. The display will show: **0:01**.
  3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.
- Note: Rinse Aid and salt LEDs will remain ON if you do not add Rinse Aid or salt. This will not affect demo mode.*

### To Exit Demo Mode:

1. Hold down the **D Start/Reset button** for 3 seconds. The display shows: **0:01**.
2. Press any two program buttons (buttons 1-6). The display will show **0:01**.
3. Press the **A On/Off button** to turn the power OFF within 10 seconds.
4. Press the **A On/Off button** to turn the power ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Model	Control Type
SHE68E05UC	MG
SGE63E05UC	MG
SGE63E06UC	MG




# Dishwasher Demo Mode Instructions


## 800, 500 and 300 Models–B, G, I and X Controls

### Preparing for Demo Mode:

1. Remove the toe kick panel and locate the drain pump connection as pictured below. Disconnect the drain pump by squeezing and pulling the white plastic connector simultaneously.

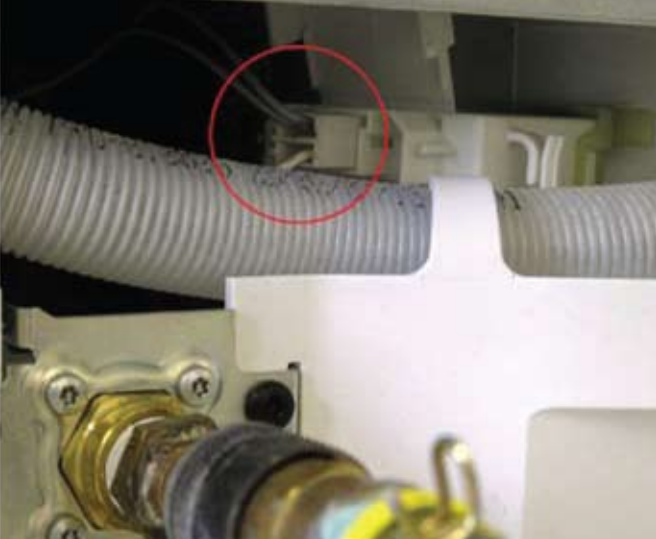

Connected

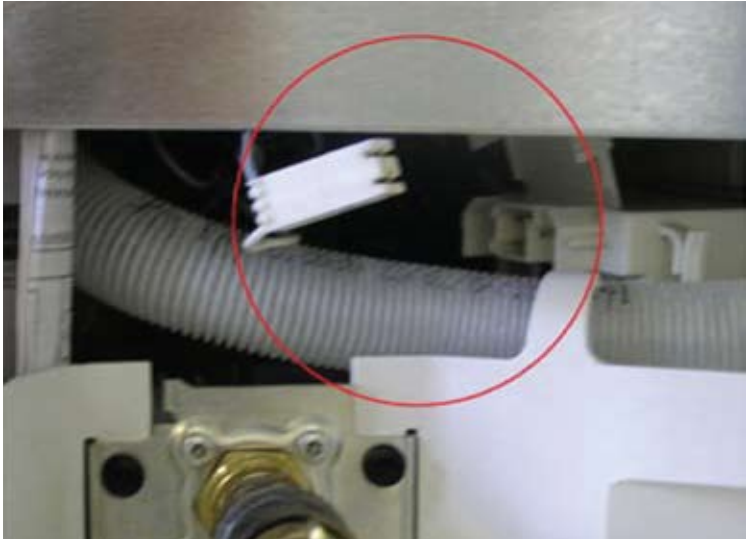

Disconnected

2. Use electric tape to cover the terminals before replacing the toe kick panel.  
3. Remove the right side panel (if any exists) and disconnect the heater jumper wire as shown below.  
Gently pull wire out from both ends and tape it to the plastic panel until it is time to reconnect it.



Side panel




Connected



Disconnected

4. Do not attach water inlet hose.  
5. Fill dishwasher by hand with approximately one gallon of distilled water and a ½ capful of an antibacterial agent (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach). Water level should be near the bottom of the fine filter collar in the sump.

### Example of Control

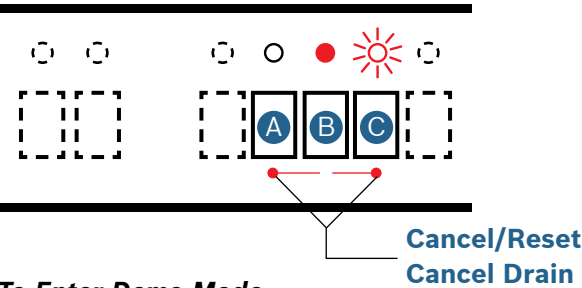

### To Enter Demo Mode:

1. Begin with the dishwasher OFF.
2. Locate the three buttons on the control panel that are underscored with the **Cancel Drain** or **Cancel/Reset** text.
3. Hold down the **A button** and the **B button** at the same time while simultaneously turning the power ON.
4. Make note of the Current Code shown on the display. It will be needed to exit demo mode.  
(See chart for typical codes)
5. Press the **B button** until the display shows: **P4**.
6. Press the **C button** to confirm this choice.
7. Press the **B button** again until the display shows: **C9**.
8. Press the **C button** to confirm this choice.
9. Turn power OFF.
10. Turn power back ON to initiate demo mode.

### During Demo Mode:

1. While on demo mode, all program LEDs are illuminated.
2. Close the door and run dishwasher for one minute. If necessary, add more water until level reaches the fine filter collar in the sump.

Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.

### To Exit Demo Mode:

1. Repeat above steps under “**To Enter Demo Mode**” steps 1 to 6.
2. Press the **B button** until the display shows the Current Code as when the dishwasher was put into demo mode. (See chart below for typical codes)
3. Press the **C button** to confirm this choice.
4. Turn power OFF. Dishwasher will no longer be in demo mode.
5. Reconnect the pump and heater jumper wire that was previously disconnected.
6. Remove water from dishwasher tub with a wet-vac.

Model	Control Type	Current Code
SHE43P02UC	GU24	C6
SHE43P05UC	GU24	C6
SHE43P06UC	GU24	C6
SHE43P12UC	GU24	C6
SHE43P15UC	GU24	C6
SHE43P16UC	GU24	C6
SHE43F12UC	GU24	C6
SHE43F15UC	GU24	C6
SHE43F16UC	GU24	C6
SHX45P01UC	IU24	C6
SHX45P02UC	IU24	C6
SHX45P05UC	IU24	C6
SHX45P06UC	IU24	C6
SHX45L05UC	IU24	C6

Model	Control Type	Current Code
SHE65P02UC	XU65	C2
SHE65P05UC	XU65	C2
SHE65P06UC	XU65	C2
SHE68P02UC	XU65	C2
SHE68P05UC	XU65	C2
SHE68P06UC	XU65	C2
SHV65P03UC	XU65	C2
SHV68P03UC	XU65	C2
SHX65P02UC	XU65	C2
SHX65P05UC	XU65	C2
SHX65P06UC	XU65	C2
SHX68P05UC	XU65	C2

Model	Control Type	Current Code
SHE55P02UC	BU55	C1
SHE55P05UC	BU55	C1
SHE55P06UC	BU55	C1
SHE55M12UC	BU55	C1
SHE55M15UC	BU55	C1
SHE55M16UC	BU55	C1




# Dishwasher Demo Mode Instructions


## 300 Series Models–J and H Controls

### Preparing for Demo Mode:

1. Remove the toe kick panel and locate the drain pump connection as pictured below. Disconnect the drain pump by squeezing and pulling the white plastic connector simultaneously.

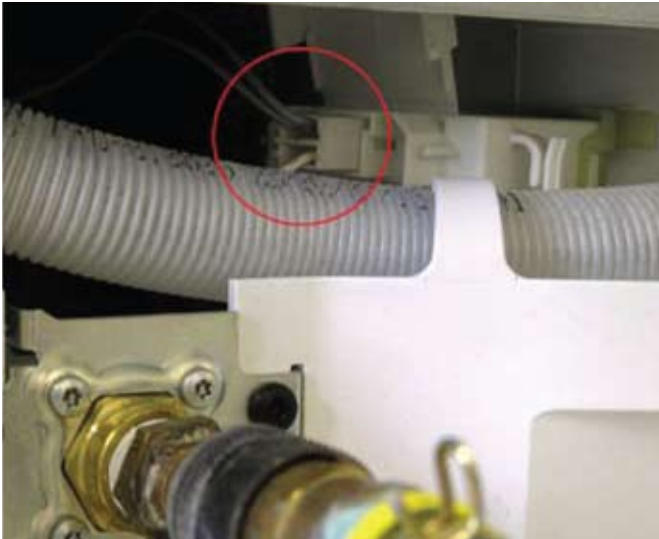

Connected

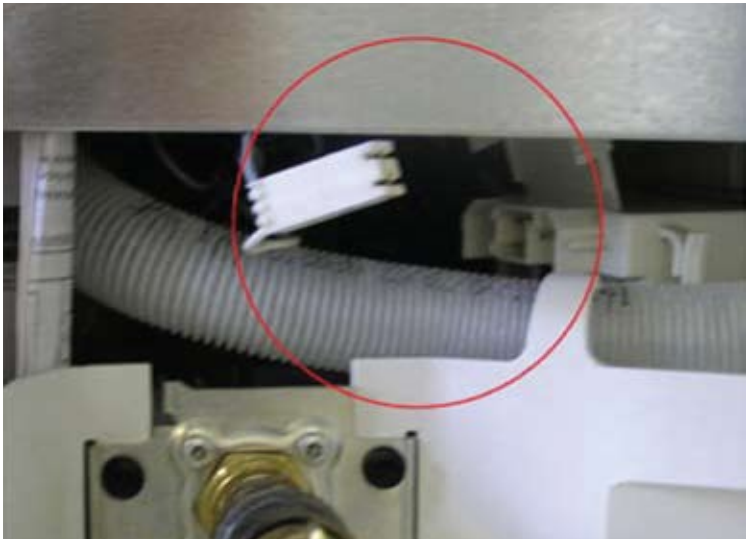

Disconnected

2. Use electric tape to cover the terminals before replacing the toe kick panel.
3. Remove the right side panel (if any exists) and disconnect the heater jumper wire as shown below. Gently pull wire out from both ends and tape it to the plastic panel until it is time to reconnect it.



Side panel




Connected



Disconnected

4. Do not attach water inlet hose.
5. Fill dishwasher by hand with approximately one gallon of distilled water and a ½ capful of an antibacterial agent (Example: Bacteriostat [used for humidifiers]. Do not use bactericide or bleach). Water level should be near the bottom of the fine filter collar in the sump.

### Example of Control

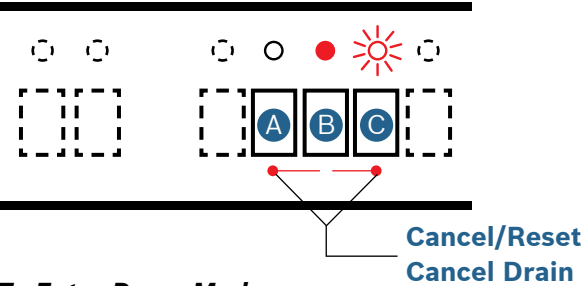

### To Enter Demo Mode:

1. Begin with the dishwasher OFF.
2. Locate the three buttons on the control panel that are underscored with the **Cancel Drain** or **Cancel/Reset** text.
3. Hold down the **A button** and the **B button** at the same time while simultaneously turning the power ON.  
**B button** LED should be constantly illuminated and **C button** LED should be flashing. ○ ● ☀
4. Press the **B button** until the **A button's** LED is illuminated. ● ○ ○
5. Press the **C button** to confirm this choice.
6. Make note of which LEDs are illuminated. It will be need to exit demo mode.  
(See chart below for typical LED combination)
7. Press the **B button** until all three LEDs are illuminated. ● ● ●
8. Press the **C button** to confirm this choice.
9. Turn power OFF.
10. Turn power back ON to initiate demo mode.

### During Demo Mode:

1. While on demo mode, all program LEDs are illuminated.
2. Close the door and run dishwasher for one minute. If necessary, add more water until level reaches the fine filter collar in the sump.

Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.

### To Exit Demo Mode:

1. While the unit is off, press the **B button** and the **C button** while simultaneously turning the power ON.  
The **B button** LED light should be illuminated and the **C button** LED should be flashing. ○ ● ☀
2. Press the **B button** until only the **A button** LED is illuminated. ● ○ ○
3. Press the **C button** to confirm this choice.
4. Press the **B button** until the display shows the same combination of lit LEDs as when dishwasher was put into demo mode.
5. Then press the **C button** to confirm this choice.
6. Turn power OFF. Dishwasher will no longer be in demo mode.
7. Reconnect the pump and heater jumper wire that was previously disconnected.
8. Remove water from dishwasher tub with a wet-vac.

Model	Control Type	LED Combination
SHE33P02UC	HU3	○ ○ ●
SHE33P05UC	HU3	○ ○ ●
SHE33P06UC	HU3	○ ○ ●
SHE43P13UC	JU24	● ● ○
SHE43P12UC	JU24	● ● ○
SHE43P15UC	JU24	● ● ○
SHE43P16UC	JU24	● ● ○




# Dishwasher Demo Mode Instructions


## Main Line-Up Models (T Control)

### Preparing for Demo Mode:

1. Remove the toe kick panel and locate the drain pump connection as pictured below. Disconnect the drain pump by squeezing and pulling the white plastic connector simultaneously.

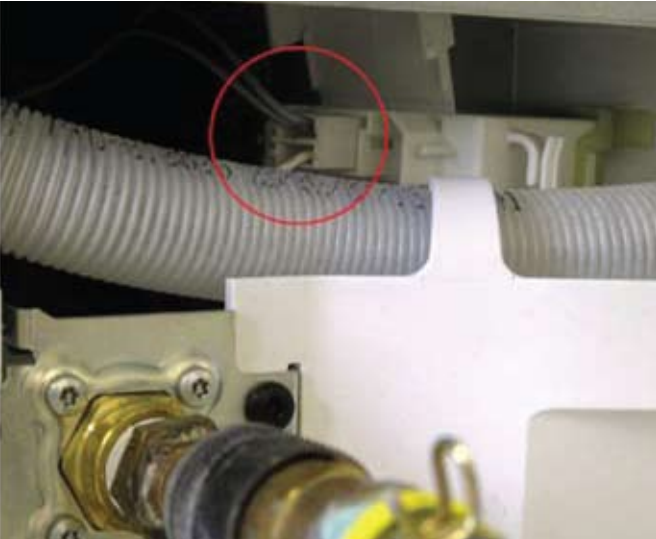

Connected

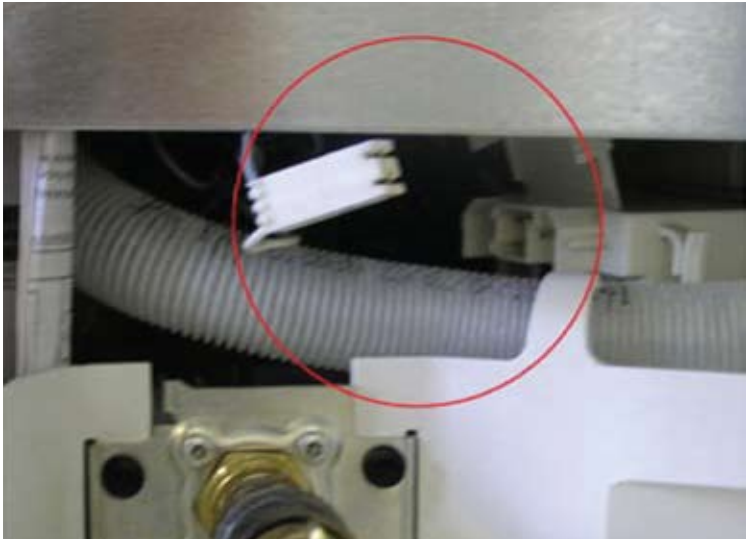

Disconnected

2. Use electric tape to cover the terminals before replacing the toe kick panel.
3. Remove the right side panel (if any exists) and disconnect the heater jumper wire as shown below. Gently pull wire out from both ends and tape it to the plastic panel until it is time to reconnect it.



Side panel




Connected



Disconnected

4. Do not attach water inlet hose.
5. Fill dishwasher by hand with approximately one gallon of distilled water and a ½ capful of an antibacterial agent (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach). Water level should be near the bottom of the fine filter collar in the sump.

### To Enter Demo Mode:

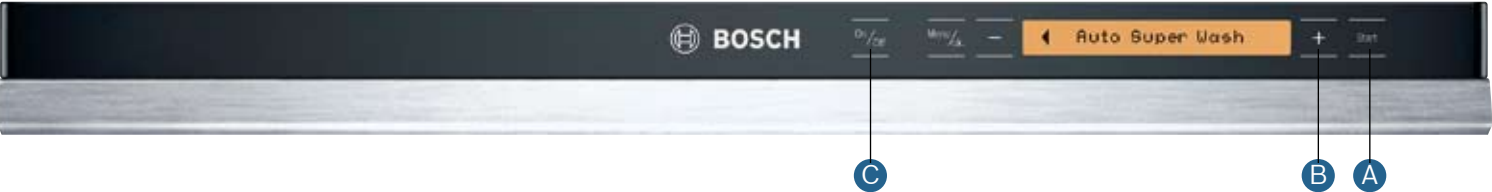

1. Begin with the dishwasher OFF.
2. With the door open, hold down the **A Start button** and the **B + button** at the same time and then press the **C On/Off button** to turn the power ON.
3. Press the **B + button** until the display reads: **SHOW-ROOM**.
4. Press the **A Start button** to confirm this choice and initiate demo mode.
5. Close the door. Dishwasher will now be in demo mode.

### During Demo Mode:

1. Run dishwasher for one minute. If necessary, add more water until level reaches the fine filter collar in the sump.

### To Exit Demo Mode:

1. Once the unit is turned OFF, it automatically returns to normal mode.

*Note: You must repeat the above steps to get it back into demo mode EACH TIME the unit has been powered down.*

Model	Control Type	Current Code
SHX98M09UC	TU	Special Program

# Dishwasher Demo Mode Instructions


## Ascenta-Integra Models–EV Controls

### Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
  2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach).
  3. Close door.
- Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.*



### To Enter Demo Mode:

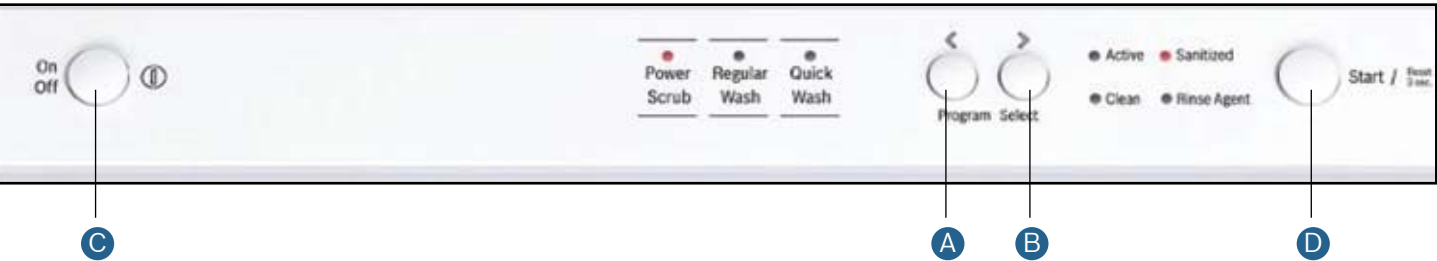

1. Begin with the dishwasher turned OFF.
2. With the door open, hold down the **A** button and the **B** button at the same time and then press the **C** On/Off button to turn the power ON. Program LEDs will display: ● Flashing LED ●
3. Press the **A** button until Program LEDs display: ● ● ●
4. Press the **B** button to confirm this choice and initiate demo mode.
5. Close the door. Dishwasher will now be in demo mode.

### During Demo Mode:

1. While on demo mode, the **Active** and **Regular Wash** LED will be illuminated.
  2. To demonstrate what the display will look like at the end of a cycle, hold down the **D** Start/Reset button. The **Clean** LED will then be illuminated and the **Regular Wash** LED will go off.
  3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.
- Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.*

### To Exit Demo Mode:

1. With the door open, hold down the **D** Start/Reset button for 3 seconds. The **Regular Wash** LED will go OFF and The **Clean** LED will be illuminated.
2. Press the **A** button and the **B** button at the same time. The **Clean** LED will now go OFF.
3. Within 10 seconds, press the **C** On/Off button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Model	Control Type	Model	Control Type	Model	Control Type
SHX4AP02UC	EV	SHX5AL02UC	EV	SHX6AP02UC	EV
SHX4AP05UC	EV	SHX5AL05UC	EV	SHX6AP05UC	EV
SHX4AP06UC	EV	SHX5AL06UC	EV	SHX6AP06UC	EV

## Ascenta-Evolution Series Models–ER Controls

### Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
  2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent. (Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach).
  3. Close door.
- Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.*

### To Enter Demo Mode:



1. Begin with the dishwasher turned OFF.
2. While holding down the **A** button and the **B** Delay button at the same time and then press the **C** On/Off button to turn the power ON. The display will show: P 0
3. Press the **D** button until the display shows: P 1
4. Press the **A** button to confirm this choice and initiate demo mode.

### During Demo Mode:

1. The display will always show: 1:23 and the **Regular Wash** LED will be illuminated when the **Half Load** button is pressed, its corresponding LED will illuminate.
  2. To demonstrate what the display will look like at the end of a cycle, hold down the **E** Start/Reset button. The display will show 0:01 and the **Regular Wash** LED will go OFF.
  3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.
- Note: Rinse Aid LED will remain illuminated if rinse aid is not added. This will not affect the demo mode.*

### To Exit Demo Mode:

1. Hold down the **E** Start/Reset button for 3 seconds. The display will show: 0:01
2. Press the **A** button and the **B** Delay button at the same time. The display will show: 0:00
3. Within 10 seconds, press the **C** On/Off button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Model	Control Type	Model	Control Type
SHE6AF02UC	ER	SHE6AP02UC	ER
SHE6AF05UC	ER	SHE6AP05UC	ER
SHE6AF06UC	ER	SHE6AP06UC	ER

# Dishwasher Demo Mode Instructions

## Ascenta-Evolution Models–EO Controls

### Preparing for Demo Mode:

1. Plug dishwasher into outlet. Do NOT attach water inlet hose or disconnect any components, including the drain pump. Drain pump can be plugged-up with a stopper, though not required for demo mode.
2. Fill dishwasher by hand with approximately one gallon of water and a ½ capful of an antibacterial agent.  
(Example: Bacteriastat [used for humidifiers]. Do not use bactericide or bleach).
3. Close door.  
*Note: If the dishwasher is filled with too much water, the water safety system will activate and drain the water until the dishwasher is empty.*

### To Enter Demo Mode:



1. Begin with the dishwasher turned OFF.
2. While holding down the **A** button and the **B** Delay button at the same time press the **C** On/Off button to turn the power ON. The program LEDs will display:
3. Press the **D** button until the program LEDs display:
4. Press the **A** button to confirm this choice and initiate demo mode. Dishwasher will now be in demo mode.

### During Demo Mode:

1. While on demo mode, the **Active** and **Regular** LED will be illuminated.
2. To demonstrate what the display will look like at the end of a cycle, hold down the **E** Start/Reset button. The **Clean** LED will then be illuminated and the **Regular Wash** LED will go off.
3. After turning the dishwasher OFF and then back ON, demo mode will continue as described in 1.  
*Note: Rinse Aid LED will remain ON if you do not add Rinse Aid. This will not affect demo mode.*

### To Exit Demo Mode:


1. Hold down the **E** Start/Reset button for 3 seconds. The **Regular Wash** LED will go OFF and the **Clean** LED will be illuminated.
2. Press the **A** button and the **B** Delay button at the same time. The **Clean** LED will now go OFF.
3. Within 10 seconds, press the **C** On/Off button to turn the power OFF.
4. Press the **C** On/Off button to turn the power back ON. Dishwasher will no longer be in demo mode.
5. Remove water from dishwasher tub with a wet-vac.

Model	Control Type	Model	Control Type
SHE4AM12UC	EO	SHE5AL02UC	EO
SHE4AM15UC	EO	SHE5AL05UC	EO
SHE4AM16UC	EO	SHE5AL06UC	EO

# Oven Demo Mode Instructions

## 800, 500 and 300 Series Models

To be fully operational, an oven requires 220v. The instructions below demonstrate how to connect the oven to a 110v plug. At 110v, the panel elements will be active. However, the heating element will not function.

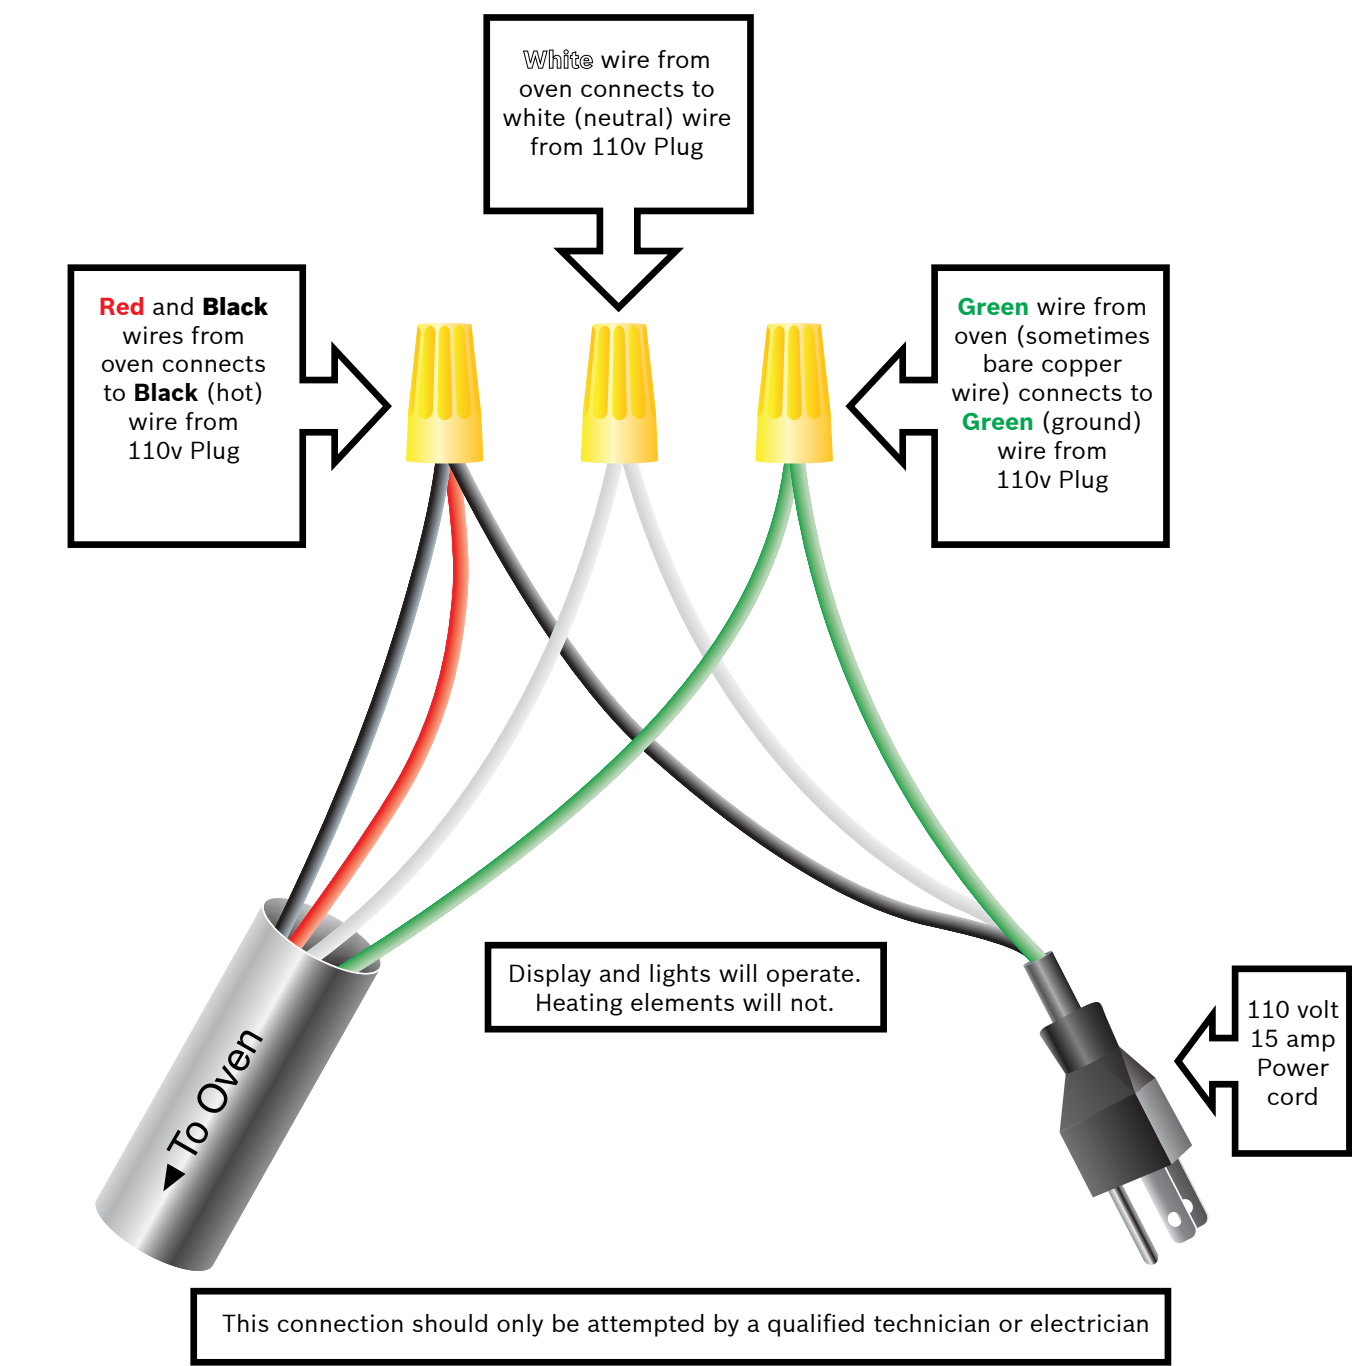

Models:	HBL8750UC	HBL8650UC	HBL8450UC	HBL57x0UC	HBL56x0UC	HBL54x0UC	HBN56x0UC
	HBN54x0UC	HBL35x0UC	HBL34x0UC	HBL33x0UC	HBN35x0UC	HBN34x0UC	HBN33x0UC




# Electric Cooktop Demo Mode Instructions

## 800 and 500 Series Models

### Preparing for Demo Mode:


- 1. To be fully operational, a cooktop requires 240v/208v. The instructions below demonstrate how to connect the cooktop to a 110v plug. At 110v, the heating element will not function.

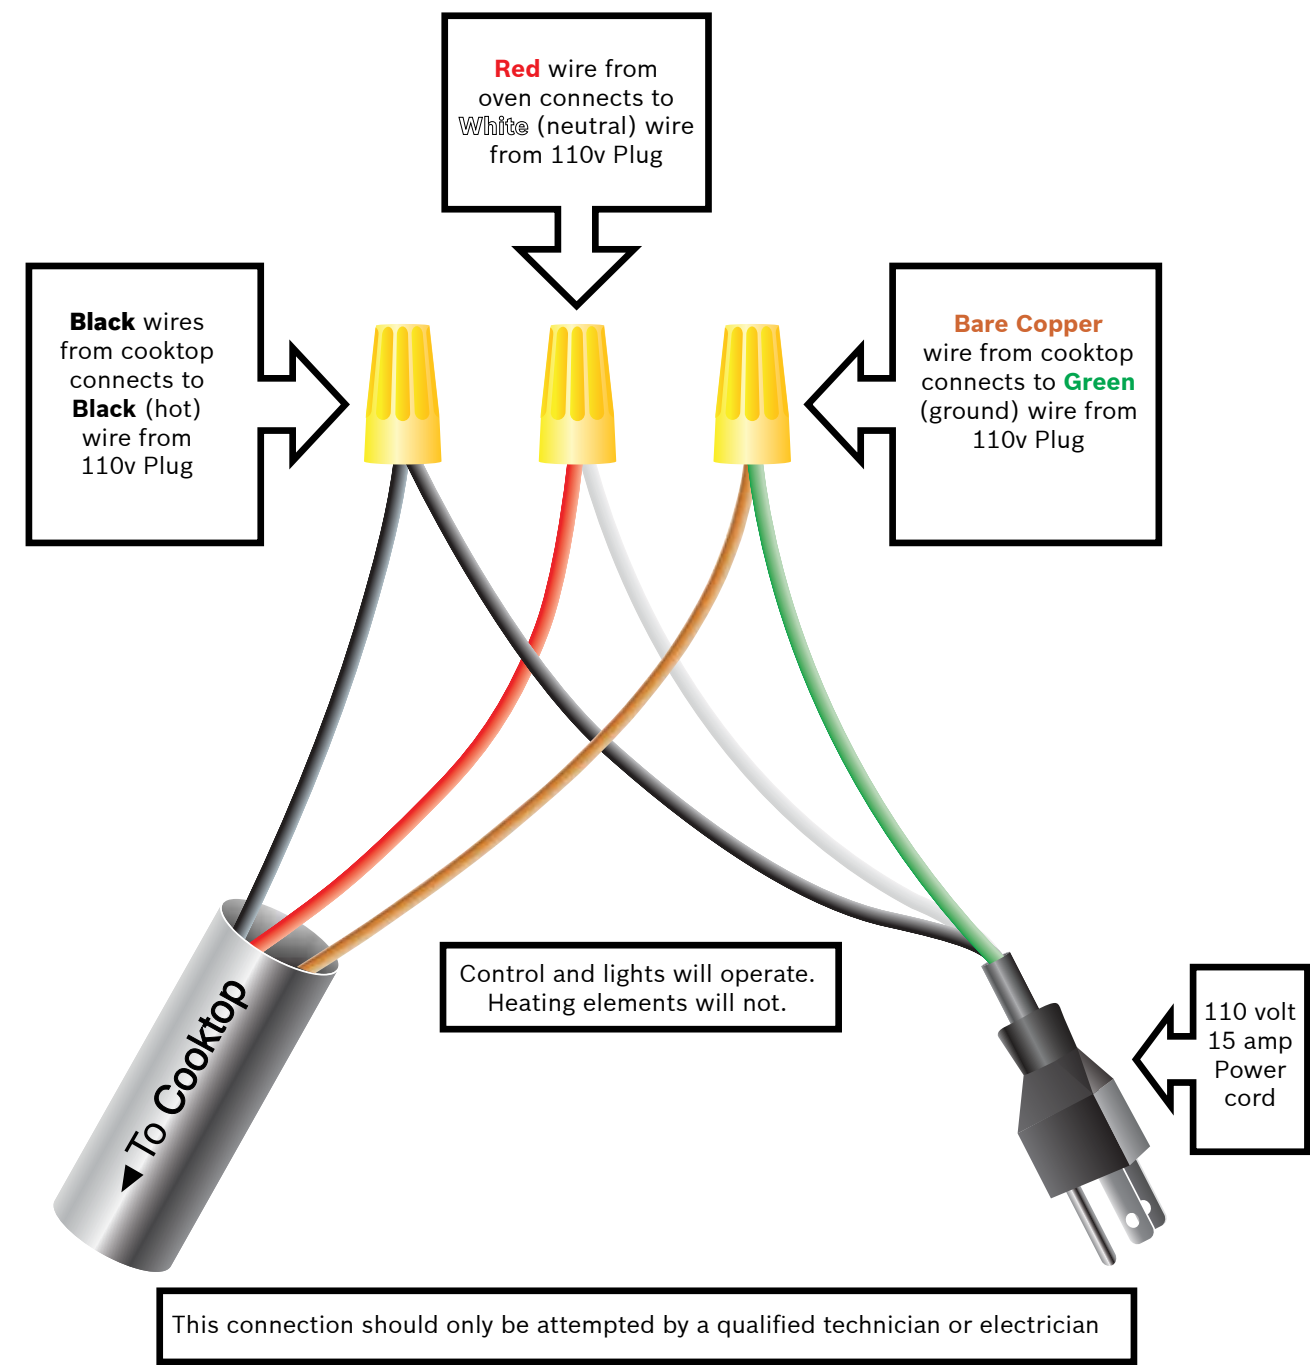

### To Enter Demo Mode:

Within the first 3 minutes after plugging the cooktop into the outlet, follow the steps below.

1. Press the **A On/Off button** to turn the cooktop on.
2. Press and hold the **B button** on the cooktop.
3. Press the **A On/Off button** to turn the cooktop off while still pressing the **B button** within 3 seconds.
4. After the cooktop has been turned off, release the **B button**.

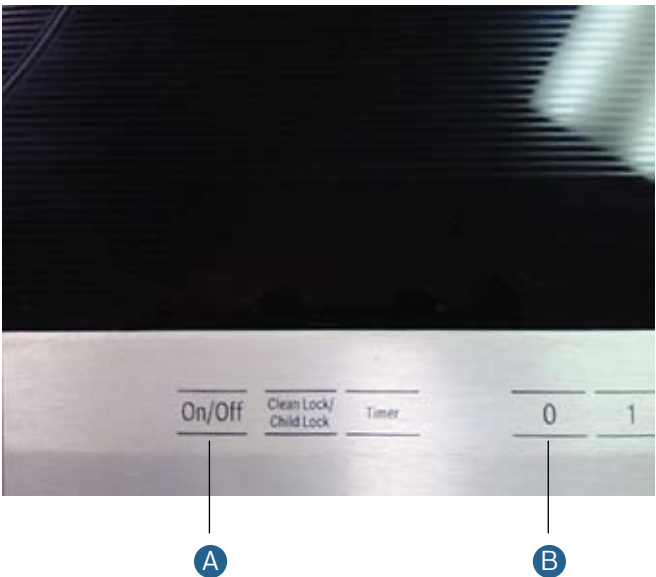

### During Demo Mode:

1. The panel lock symbol **(red key) C** will turn on indicating that the cooktop is now in demo mode. The elements will not turn on and it is safe to demonstrate the controls.



### To Exit Demo Mode:



1. Within the first 3 minutes after plugging in the cooktop, repeat the above steps to return the unit to normal operation.


Models:	NET8654UC	NET8054UC	NET5654UC	NET5054UC
---------	-----------	-----------	-----------	-----------

# Refrigeration Demo Mode Instructions

## Linea™ 800 Series and 500 Series Models

### To Enter Demo Mode:

- 1. Turn the refrigerator on.
- 2. Hold the **A**  **Super/quick ice** and the **B**  **buttons** simultaneously.
- 3. The freezer display will show **88** for 3 seconds. When **88** is displayed, release the buttons.

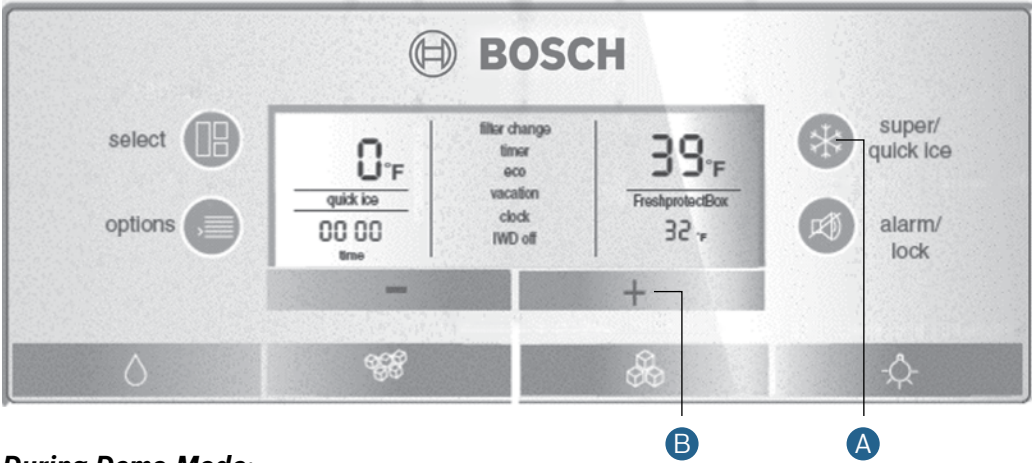

### During Demo Mode:

- 1. Display functions can be demonstrated.
- 2. Ventilator and interior light are active.
- 3. All other components are not active.



### To Exit Demo Mode:

- 1. Turn off refrigerator.

Models:	B22CS80SNS	B22CS50SNS	B22CS50SNB	B22CS50SNW
---------	------------	------------	------------	------------

## Linea™ 300 Series Model

### To Enter Demo Mode:

- 1. Turn the refrigerator on.
- 2. Hold down the **A**  **Fridge button** and **B**  **Alarm off/ lock button**.
- 3. The freezer display will show **88** for 3 seconds. When **88** is displayed, release the buttons.



### During Demo Mode:

- 1. Display functions can be demonstrated.
- 2. Ventilator and interior light are active.
- 3. All other components are not active.

### To Exit Demo Mode:

- 1. Turn off refrigerator.

Model:	B22CS30SNS
--------	------------




# Refrigeration Demo Mode Instructions

## Integra Bottom Freezer

### To Enter Demo Mode:

- 1. Press the **A On/Off button** to turn unit off.
- 2. Press the **A On/Off button** to turn unit on.
- 2. Within 30 seconds of starting the unit press the **B Setup button** and the **C Cool button** simultaneously until the word **DEMO** on the **D display** is shown.

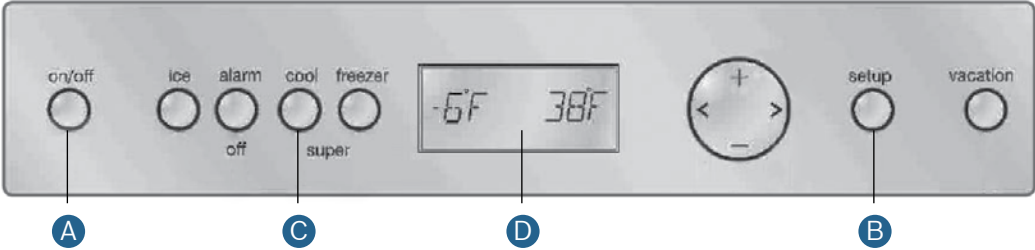

### During Demo Mode:

- 1. Display functions can be demonstrated.
- 2. Ventilator and interior light are active.
- 3. All other components are not active.

### To Exit Demo Mode:

- 1. Press the **A On/Off button** to turn unit off.

Models:	B36ET71SNS	B36IT70NNP	B36IT70NSP	B36IT70SNS
	B36IT71NNP	B36IT71SN	B36IT71SNS	